MOUNTING THE RADIO

DIN MOUNT

1. Slide DIN sleeve into kit from front.
2. Bend tabs to secure DIN sleeve to panel.
3. Slide radio into DIN sleeve until snaps into place.

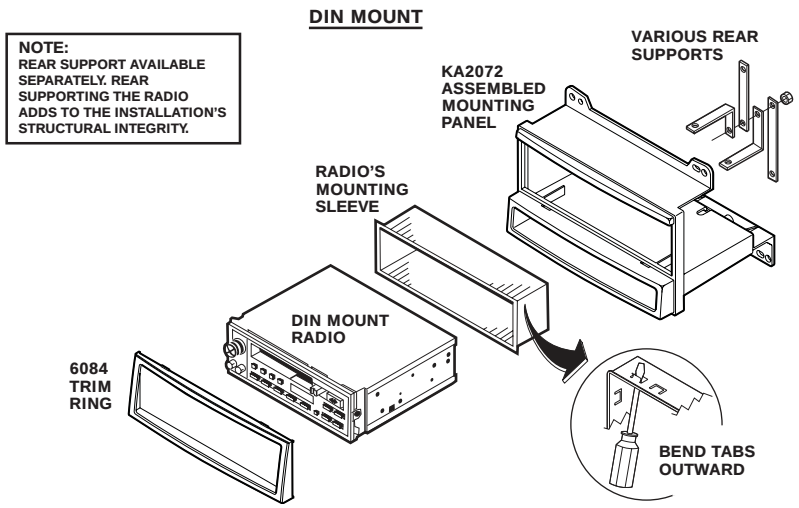
DIN MOUNT
NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.
VARIOUS REAR SUPPORTS
KA2072 ASSEMBLED MOUNTING PANEL
RADIO'S MOUNTING SLEEVE
DIN MOUNT RADIO
6084 TRIM RING
BEND TABS OUTWARD

VEHICLE DISASSEMBLY

2006-Up Kia Sedona

RADIO REMOVAL:

1. Using a panel removal tool, extract the bezel surrounding the shifter.
2. Using a panel removal tool, unsnap the dash bezel surrounding the radio.
3. Extract (1) Phillips head screw securing EACH air vent panel.
4. Using apanel removal tool, unsnap and remove air vent panels.
5. Extract (4) Phillips head screws securing factory A/C control panel.
6. Extract (4) Phillips head screws securing radio to dash.

SCOSCHE®

KA2072

IN-DASH INSTALLATION KIT FOR 2006-UP KIA SEDONA

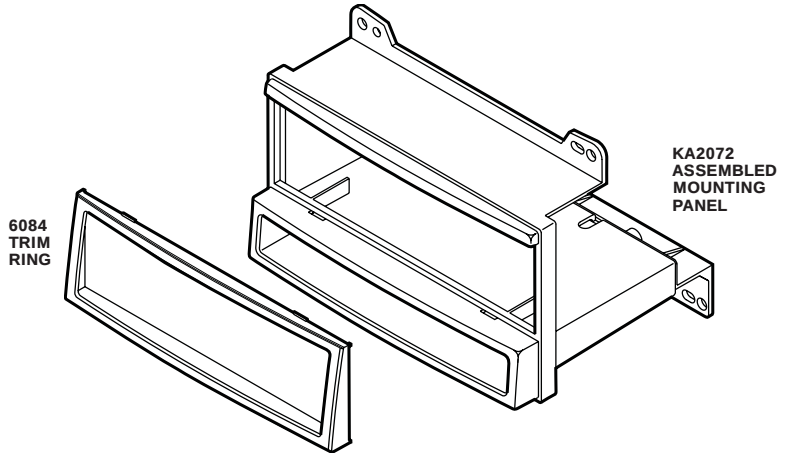

FACTORY WIRING CODES

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

H Y 0 7 B
2006-Up Hyundai Accent and Azera;
2005-Up Kia Sportage

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche KA2072 Kit. This Kit was manufactured with the highest of quality standards.

CAUTION: DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/ inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call: **TECH HELP 1-800-621-3695x3**

©2006 SCOSCHE INDUSTRIES, INC.

KA2072 5/06 (3000003)